 


PRODUCT MANUAL

WET WIPE WARMER

D03

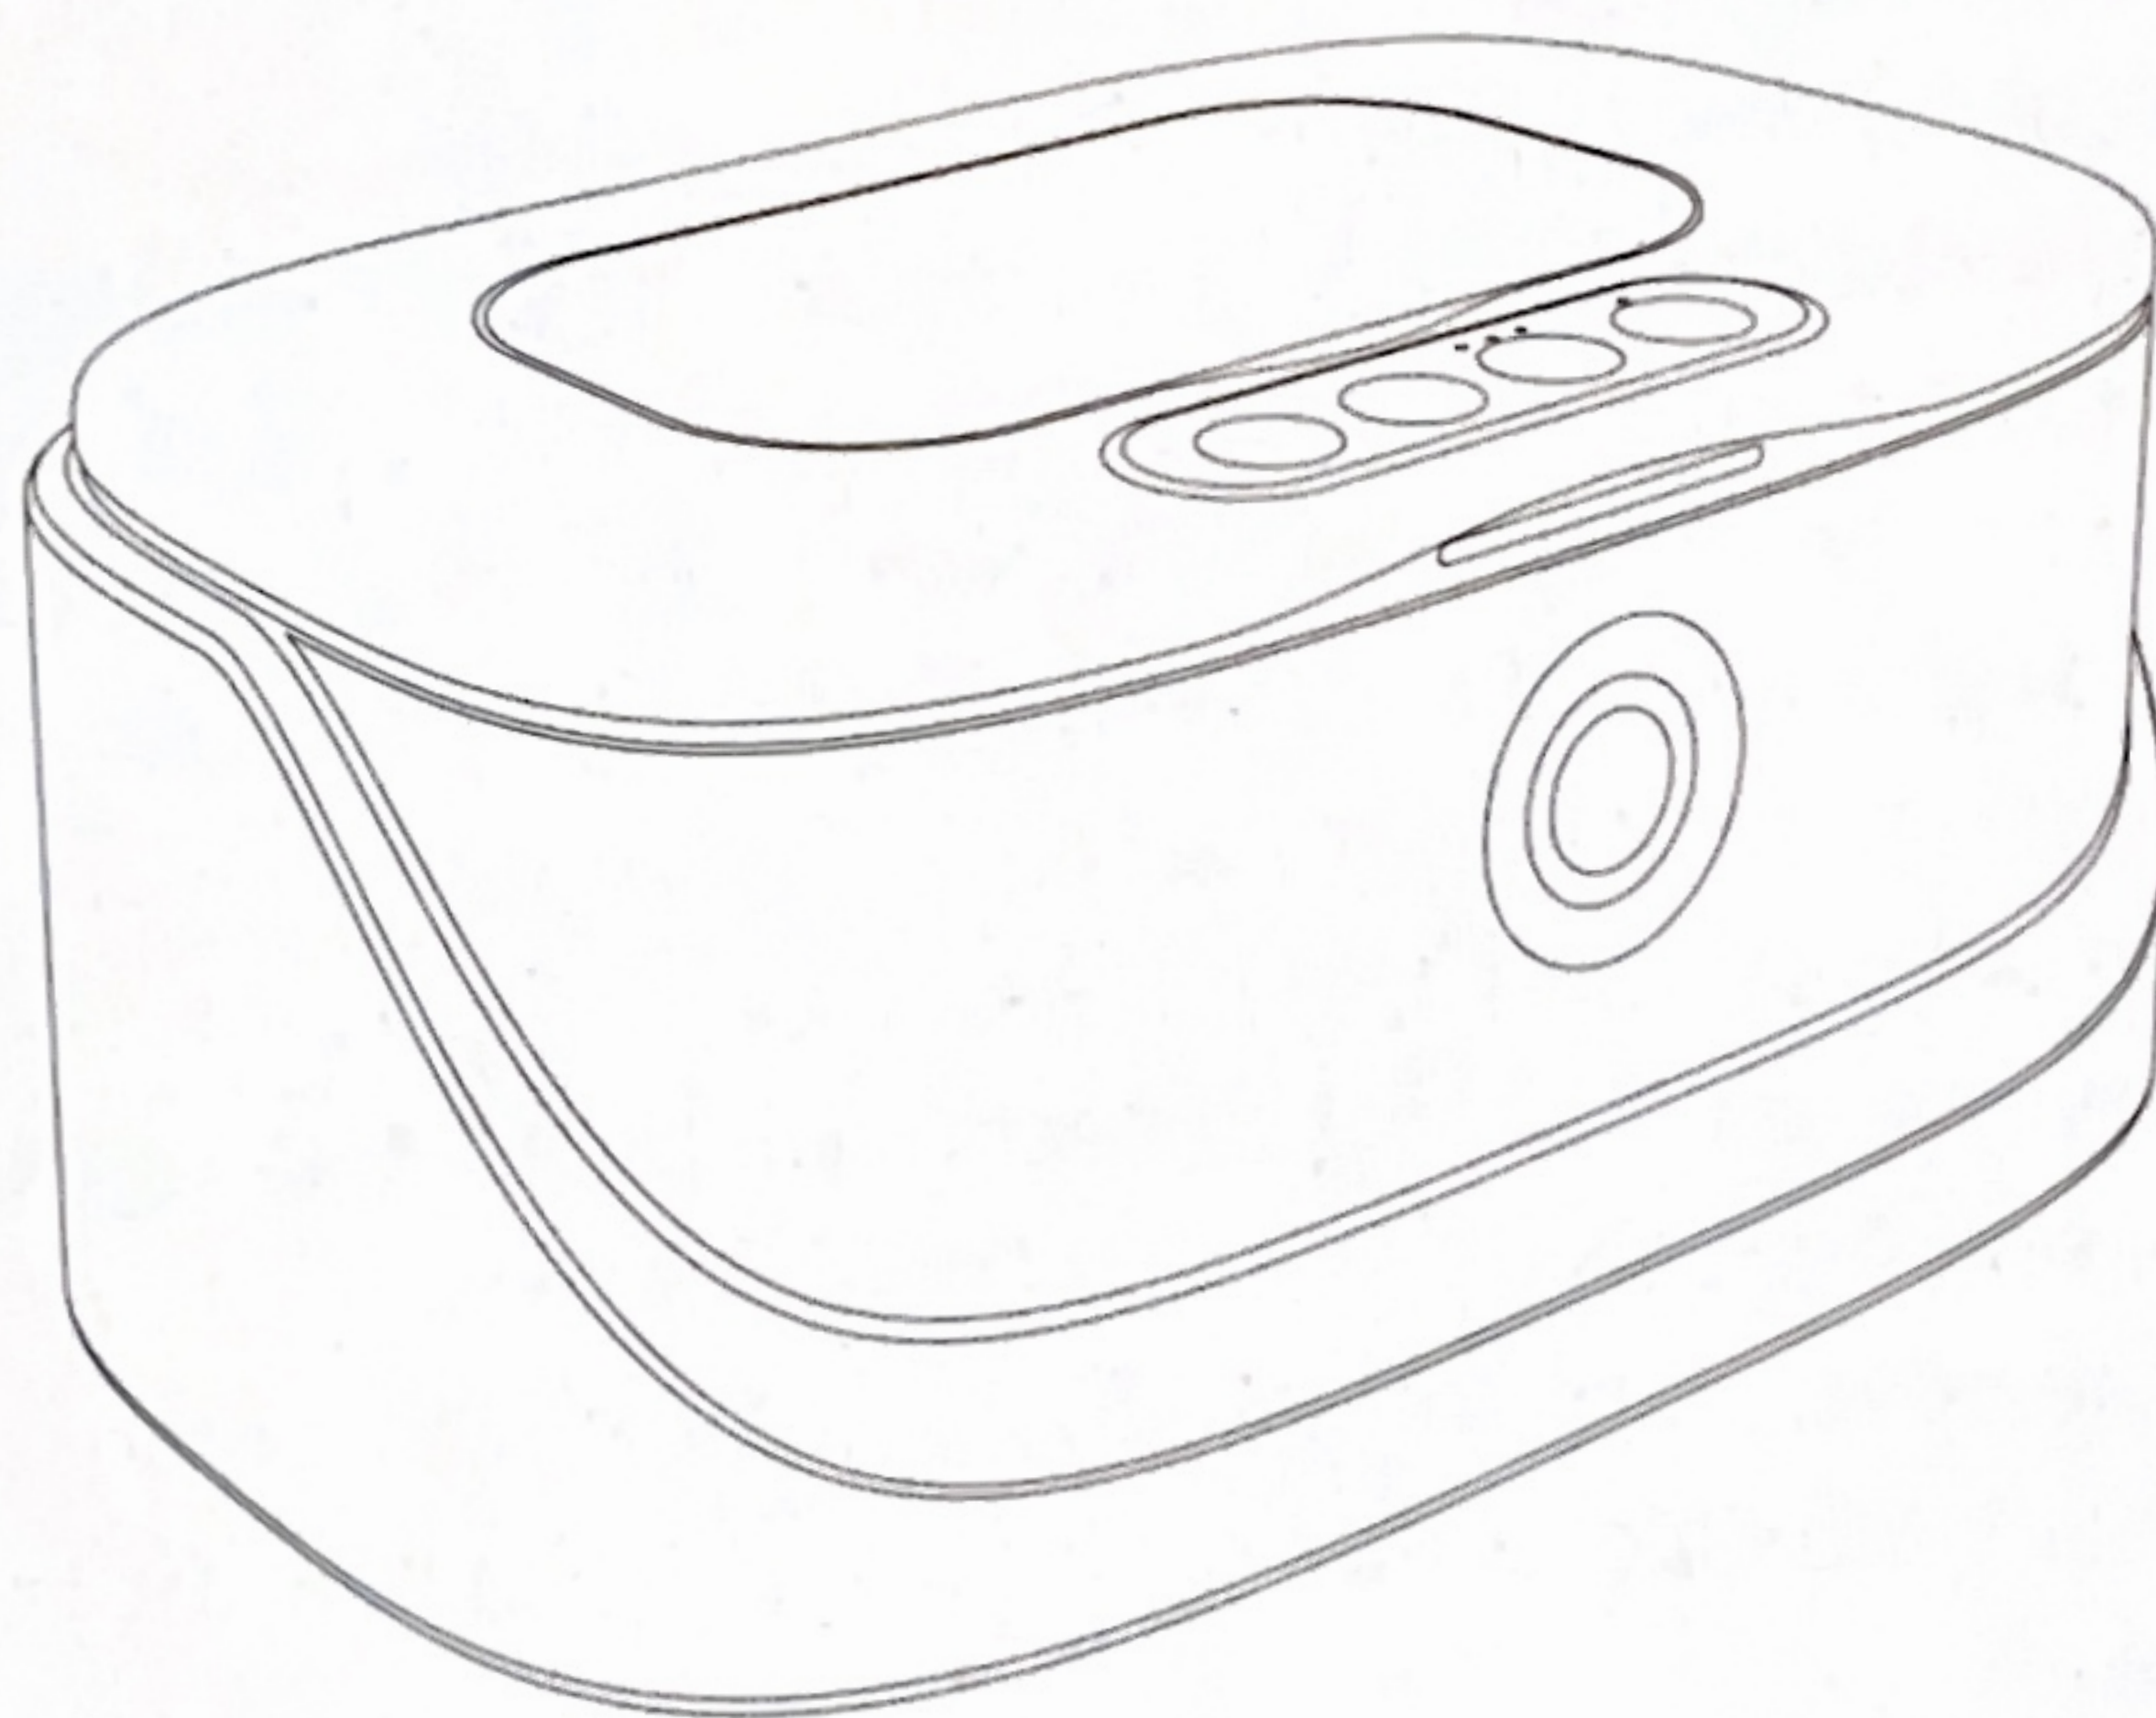

*This manual is the general version, the product packaging shall prevail.

I. Notes for use safely

Warning:

1. It is forbidden to immerse the power cord plug into **any** liquid.
2. Do not let children play with the plastic bags which **used** for product packaging, so as not to cause the danger of asphyxia.
3. Do not place the product in the location or place that the infant may touch.
4. If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its maintenance department or after sale department.

Attention:

1. This product is not suitable to be used by children or people with physical, sensory, or mental ability defects. With supervision or guidance on the safe use of appliances and understanding of the hazards involved, the product may be used by people with unsound limbs, sensory or mental disorders or lack of relevant experience and knowledge. Children should be taken care of to ensure that they do not treat the product as toys.
2. Before connecting the product to the power supply, please be sure to check whether the standard voltage of the product matches the power supply voltage to avoid damage to the components or fire.
3. The power plug of the product must be plugged into a ground socket, and make sure that it is firmly inserted. In order to prevent bad contact and overheating of the components, causing short circuit or fire and other hazards.
4. Do not allow the power cord and plug to contact the high temperature surface and sharp corners. If the plug, power cord or the product itself are damaged, do not use this product.
5. Disconnect the power supply before cleaning; this product is for indoor use only. This product meets the national safety standards. If the residual material odor is normal, please clean the product in accordance with the correct cleaning method before the first use, so as to effectively reduce or eliminate the residual odor.
6. When not in use, please unplug the power supply, timely clean it and dry for storage.
7. Do not insert pins, wire or other metal objects into any gap or opening to avoid

electric shock injury.

8.Ensure that the power cord does not contact with sharp edges, rough edges,other protruding sharp objects or high temperature surface items to prevent leakage, causing electric shock or fire hazard.

9.Please arrange the power cord in a reasonable position to avoid the danger of tripping.


10.Do not put this product close to high temperature, strong magnetic, flammable body (such as natural gas, biogas, etc.), to prevent cause Device damage, malfunction, or fire.

11.Do not let the product work unattended to prevent fire and other hazards.

12.Do not plug or clean the socket with wet cloth, otherwise it will cause the danger of electric shock.

13.When not in use, when cleaning or moving the product, and when the product is wrong, the power supply is disconnected to prevent electric shock hazard or fire hazard.


2.Spare Part name and usage

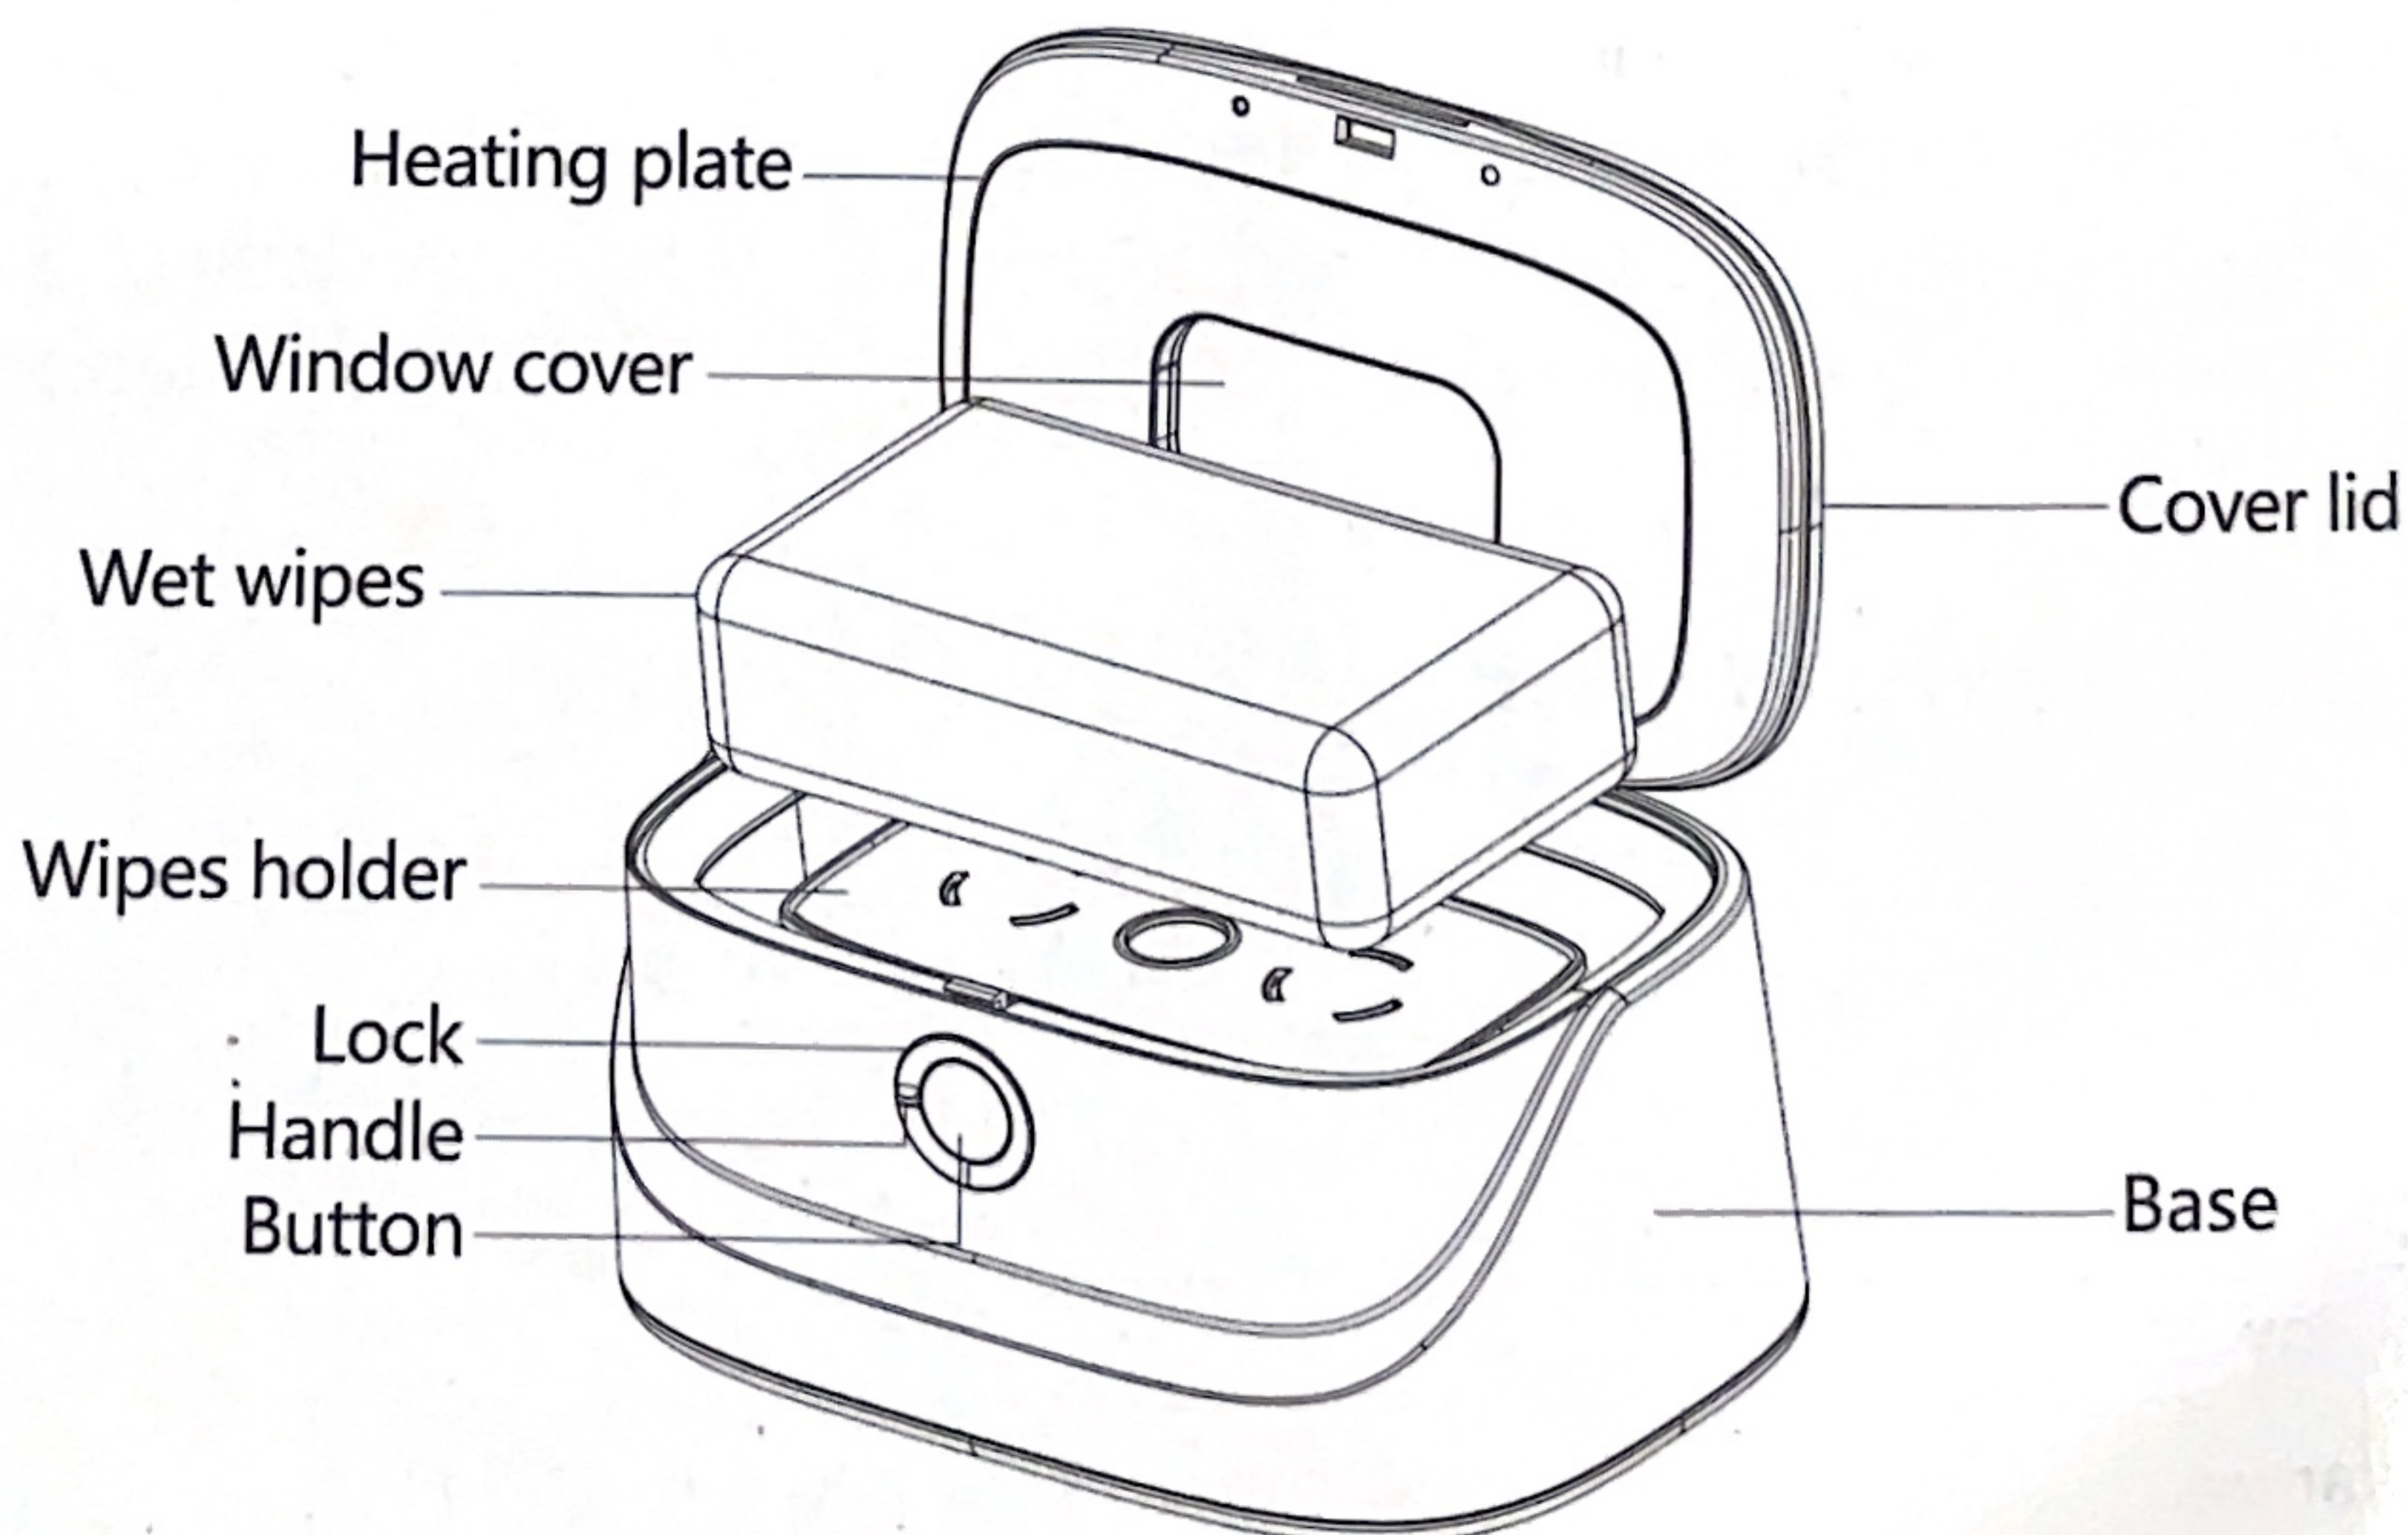

1.open lid

①. If the handle points to the "↑" unlocking state, you can directly press the push button, then you can open the lid.

②. If the handle points to the "🔒" locked state, first turn the handle to the "↑" unlocked state, then can press the button, after can open the lid, other-wise in the "🔒" locked state is not to push the button and can not open the lid.

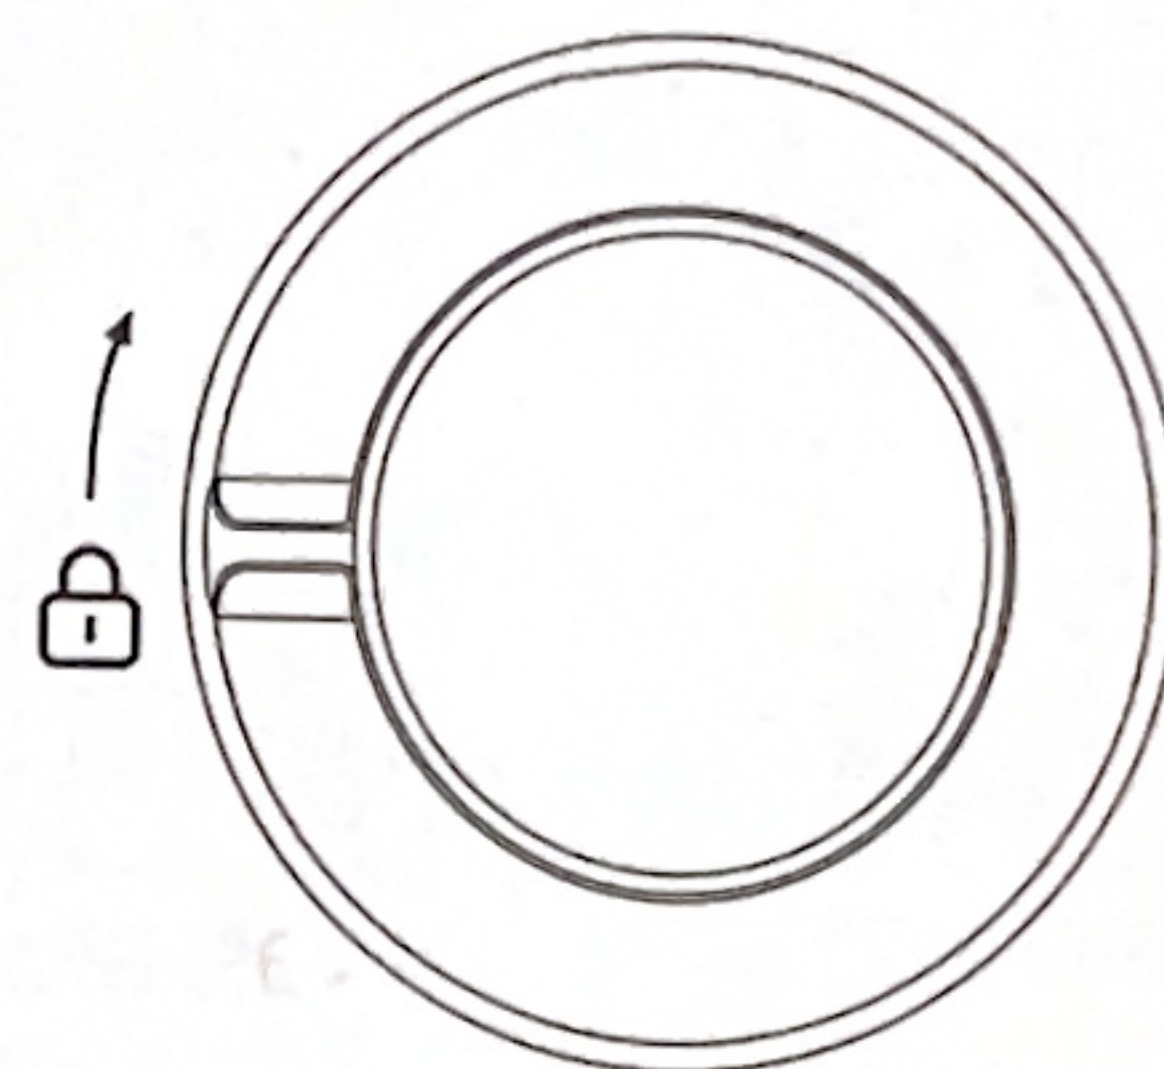

2.Put the wet wipes into the machine, and then put the prepared wet wipe bag flat on the holder, press the wet towel bag with the hand, then cover the lid with the hand, then the wet towel bag is installed.

3.Take wet wipes: press the window cover in the middle of the lid, you can open the window cover, then you can take wet wipes. Cover the window cover, press again, you can lock the door cover and can not open.

*Remind:

1. When installing the wipes bag, please pay attention to remove the small plastic cover on the bag, otherwise it cannot be used!


2. When changing the wipes bag, please cut off the power supply first, and then change the wipes bag after the heating sheet on the lid is cooled to prevent your hands from being scalded.

3. The maximum size of the wet towel bag is 200 * 140mm / 80 tablets, and it is recommended to use the wet towel bag size of 180 * 120mm / 80 tablets.

3.Product specification

product name	Wet wipe warmer
Model No	HJ-D0301
Input voltage	5V/DC
Power	10W
Standard	GB4706. 1-2005; GB4706. 19-2008

4.Button description

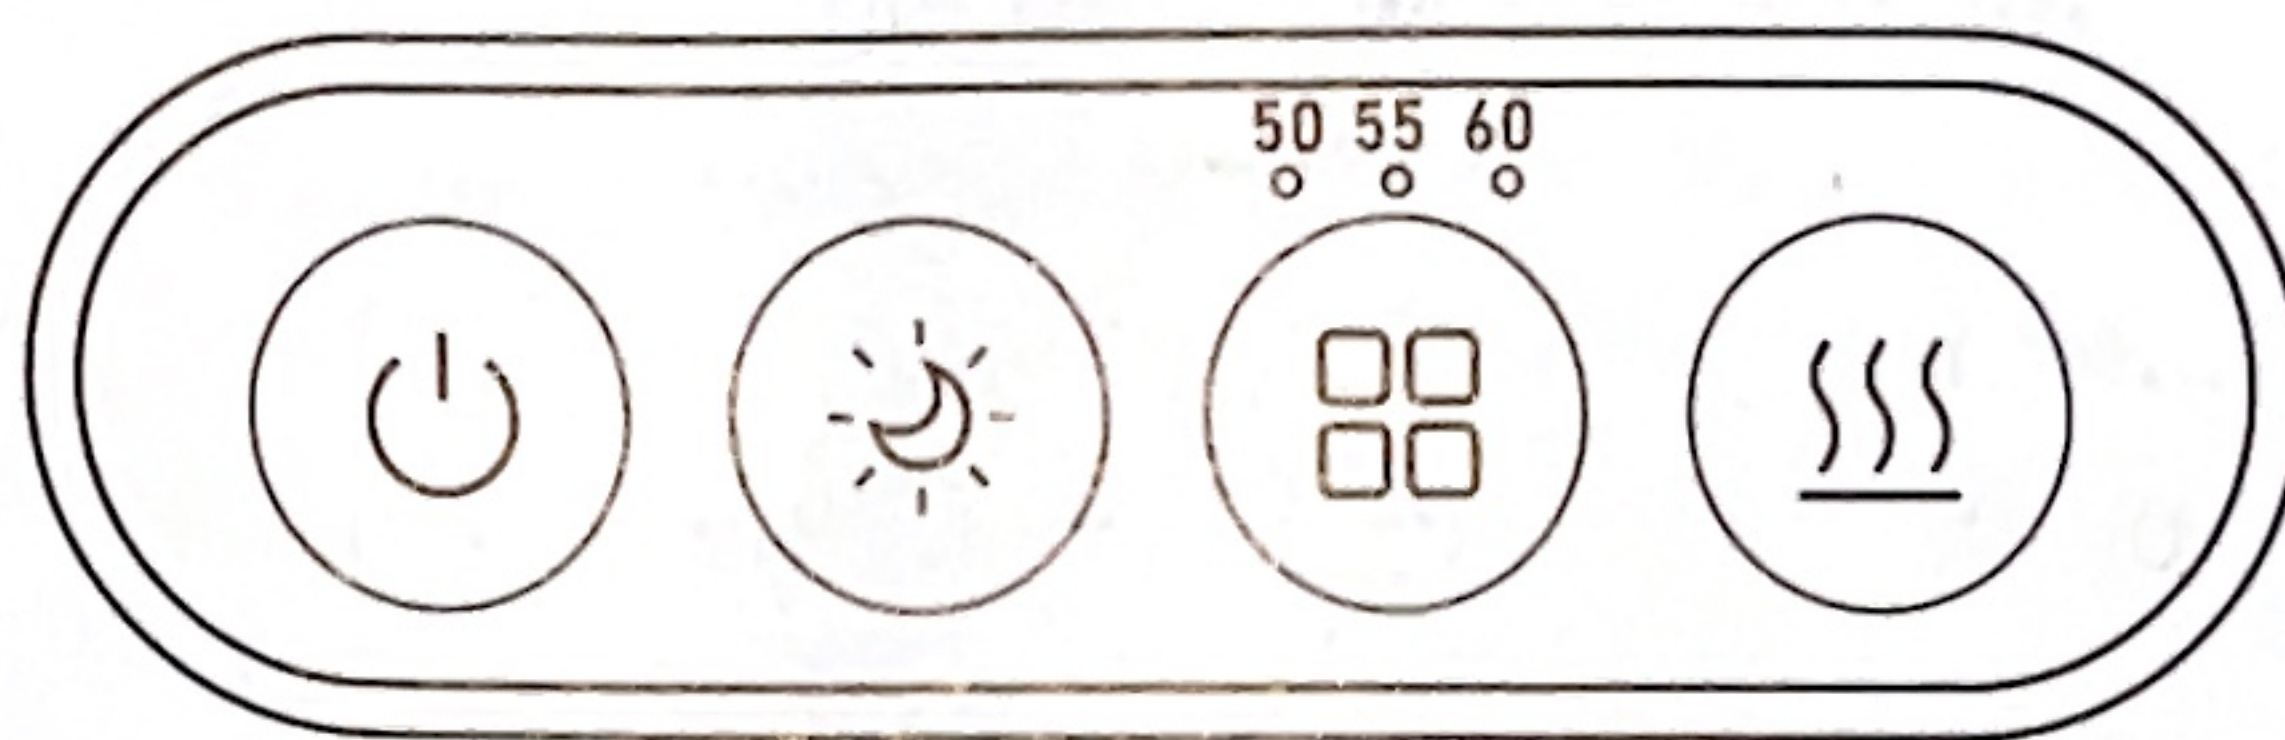

Turn on the power,the function indicator is lit and turns off after 1 second. Then turn to standby state (night light default-breathing light mode);




Power button:

The default function "50" indicator light is on.



Night light:

Press this key to adjust the brightness with 3 levels.

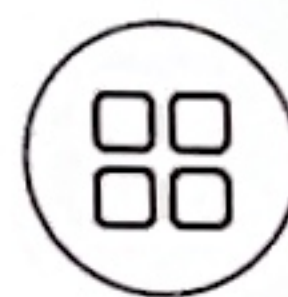

Temperature set:

Press the indicator light corresponding to the circulation of 50°C,55°C,60°C.



Fast warm:

Press this key to heat it up quickly (5-10 minutes).

Kindly reminder:

- 1.because the wet wipes contain natural plant fiber normally, may be turn yellow after heating, this is a normal phenomenon, can be safely used;
- 2.In order to prevent the wipes from drying out and changing color, the unsealed wipes should be used up as soon as possible (within about a week);
- 3.The heated temperature wipes will cool down quickly after contact with the outside environment, so the heated warm wipes should be used as soon as possible after being removed from the heater;
- 4.When using the wipes, please remove the small plastic cover plate on the wipes first.

5.Cleaning and maintenance

- 1.Before each cleaning, unplug the power plug and cool the product.
- 2.Ensure that the electrical lines are dry.
- 3.avoid sharp objects touch, scratches, scratch the surface and shell.
- 4.wipe the shell and bottom of the product with a clean cloth, do not use scrub powder, cleaning cream and other products, they will harm the product The luster of the shell.
5. Do not soak the heating cover, power cord and power plug in water for cleaning.
6. The wet towel bracket can be washed with clean water, and do not disinfect with high temperature cooking, so as to avoid deformation.
7. When the product is not in use for a long time, please clean it, put it into the packaging box, and store it in a ventilated and dry place.

6.Failure analysis and eliminate

Failure	Analysis	Solutions
No display and no operation after plugging in the power supply	The power cord plug is not inserted well	Con❏rm the connection condition of the power cord plug
	The power cord is damaged	Contact after-sales service for repair or replacement
The key touch is not sensitive	Hands too dry or have too much water	Wash hands and dry and operate again

6. Identification table for the restricted use of hazardous substances

Name and content table of harmful substances

Spare Part name	Hazardous substances					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Rubber Parts	○	○	○	○	○	○
PTC heating tablets	×	○	×	○	○	○
Screws	○	○	○	×	○	○
Plastics	○	○	○	○	○	○
Hardwares	○	○	○	○	○	○
Power lines, printed -circuit-board components (PCB board, harness, etc.)	×	○	○	○	○	×

○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T26572.

×: Indicates that the content of the toxic or hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T26572. The parts of "x" indicate that due to the current global technical and technological level limits, the complete replacement of non-environmentally friendly substances or elements cannot be achieved, and will be gradually improved with technical improvements.

Warranty coverage and duration:

From the date of purchase, normal users, the circuit board parts enjoy three years of free maintenance service, the whole machine enjoys one year of free maintenance service, the product shell plastic is not in the warranty scope, please show the after-sales service card and purchase voucher or invoice can be valid.

Out of warranty:

Consumables, accessories

Careless use, error or human-caused damage

After-sales service card lost or damaged

Damage caused by natural disasters or force majeure